

# Tabuľka prevodov meničov MK-36, MK-39

# Eltis

Výstupný kanál	1 (48.5-56.5)	2 (58-66)	3 (76-84)	4 (84-92)	5 (92-100)	SR1 (110-118)	SR2 (118-126)	SR3 (126-134)	SR4 (134-142)	SR5 (142-150)	SR6 (150-158)	SR7 (158-166)	SR8 (166-174)	6 (174-182)
6 (174-182)	125,5													
7 (182-190)	133,5													
8 (190-198)	141,5		114											
9 (198-206)	149,5		122	114										
10 (206-214)	157,5	148	130	122										
11 (214-222)	165,5	156	138	130	122									
12 (222-230)	173,5	164		138	130									
21 (470-478)	421,5	412	394	386	378	360	352	344	336	25,26 328			304	296
22 (478-486)	429,5	420	402	394	386	368	360	352	344	336	24,25 338		312	304
23 (486-494)	437,5	428	410	402	394	376	368	360	352	344	25,27 336		320	312
24 (494-502)	445,5	436	418	410	402	384	376	368	360	352	344	28,29 344		320
25 (502-510)	453,5	444	426	418	410	392	384	376	368	360	352	27,28 344	312	304
26 (510-518)	461,5	452	434	426	418	400	392	384	376	368	360	29,30 352	320	312
27 (518-526)	469,5	460	442	434	426	408	400	392	384	376	368	31,32 360	328	320
28 (526-534)	477,5	468	450	442	434	416	408	400	392	384	376	368	30,31 360	312
29 (534-542)	485,5	476	458	450	442	424	416	408	400	392	384	376	32,33 368	320
30 (542-550)	493,5	484	466	458	450	432	424	416	408	400	392	384	34,35 376	328
31 (550-558)	501,5	492	474	466	458	440	432	424	416	408	400	392	384	33,34 376
32 (558-566)	509,5	500	482	474	466	448	440	432	424	416	408	400	392	35,36 384
33 (566-574)	517,5	508	490	482	474	456	448	440	432	424	416	408	400	37,38 392
34 (574-582)	21 525,5	516	498	490	482	464	456	448	440	432	424	416	408	400
35 (582-590)	21,22 533,5	524	506	498	490	472	464	456	448	440	432	424	416	408
36 (590-598)	22,23 541,5	532	514	506	498	480	472	464	456	448	440	432	424	416
37 (598-606)	23,24 549,5	540	522	514	506	488	480	472	464	456	448	440	432	424
38 (606-614)	24,25 557,5	548	530	522	514	496	488	480	472	464	456	448	440	432
39 (614-622)	25,26 565,5	556	538	530	522	504	496	488	480	472	464	456	448	440
40 (622-630)	26,27 573,5	564	546	538	530	512	504	496	488	480	472	464	456	448
41 (630-638)	27,28 581,5	572	554	546	538	520	512	504	496	488	480	472	464	456
42 (638-646)	28,29 589,5	580	562	554	546	528	520	512	504	496	488	480	472	464
43 (646-654)	29,30 597,5	588	570	562	554	536	528	520	512	504	496	488	480	472
44 (654-662)	30,31 605,5	596	578	570	562	544	536	528	520	512	504	496	488	480
45 (662-670)	31,32 613,5	604	586	578	570	552	544	536	528	520	512	504	496	488
46 (670-678)	32,33 621,5	612	594	586	578	560	552	544	536	528	520	512	504	496
47 (678-686)	33,34 629,5	620	602	594	586	568	560	552	544	536	528	520	512	504
48 (686-694)	34,35 637,5	628	610	602	594	576	568	560	552	544	536	528	520	512
49 (694-702)	35,36 645,5	636	618	610	602	584	576	568	560	552	544	536	528	520
50 (702-710)	36,37 653,5	644	626	618	610	592	584	576	568	560	552	544	536	528
51 (710-718)	37,38 661,5	652	634	626	618	600	592	584	576	568	560	552	544	536
52 (718-726)	38,39 669,5	660	642	634	626	608	600	592	584	576	568	560	552	544
53 (726-734)	39,40 677,5	668	650	642	634	616	608	600	592	584	576	568	560	552
54 (734-742)	40,41 685,5	676	658	650	642	624	616	608	600	592	584	576	568	560
55 (742-750)	41,42 693,5	684	666	658	650	632	624	616	608	600	592	584	576	568
56 (750-758)	42,43 701,5	692	674	666	658	640	632	624	616	608	600	592	584	576
57 (758-766)	43,44 709,5	700	682	674	666	648	640	632	624	616	608	600	592	584
58 (766-774)	44,45 717,5	708	690	682	674	656	648	640	632	624	616	608	600	592
59 (774-782)	45,46 725,5	716	698	690	682	664	656	648	640	632	624	616	608	600
60 (782-790)	46,47 733,5	724	706	698	690	672	664	656	648	640	632	624	616	608

## Vysvetlivky:

- Prázdne políčka - zakázané a nepoužiteľné prevody
- čísla kanálov na vstupe meniča, ktoré rušia tento prevod (zrkadlá, produkty s 2 harm. a pod.)
  - frekvencia oscilátora v MHz

www.netax.sk/~altis

E-mail: altis@netax.sk

Výstupný kanál	7 (182-190)	8 (190-198)	9 (198-206)	10 (206-214)	11 (214-222)	12 (222-230)	SR11 (230-238)	SR12 (238-246)	SR13 (246-254)	SR14 (254-262)	SR15 (262-270)	SR16 (270-278)	SR17 (278-286)	SR18 (286-294)
6 (174-182)														
7 (182-190)														
8 (190-198)														
9 (198-206)														
10 (206-214)														
11 (214-222)														
12 (222-230)														
21 (470-478)	288	280	272	264	256					216	208	200	192	184
22 (478-486)	296	288	280	272	264					224	216	208	200	192
23 (486-494)	304	296	288	280	272	264								
24 (494-502)	312	304	296	288	280	272					224	216	208	200
25 (502-510)	320	312	304	296	288	280	272				232	224	216	208
26 (510-518)	328	320	312	304	296	288	280					240	232	224
27 (518-526)	22,23 336	328	320	312	304	296	288	280					240	232
28 (526-534)	24,25 344	336	328	320	312	304	296	288					248	240
29 (534-542)	26,27 352	344	336	328	320	312	304	296	288					248
30 (542-550)		25,26 352	344	336	328	320	312	304	296					256
31 (550-558)		27,28 360	352	344	336	328	320	312	304	296				
32 (558-566)		29,30 368	360	352	344	336	328	320	312	304				
33 (566-574)		28,29 368	360	352	344	336	328	320	312	304				
34 (574-582)	36,37 392	30,31 376	368	360	352	344	336	328	320	312	304			
35 (582-590)	38,39 400	32,33 384	376	368	360	352	344	336	328	320	312			
36 (590-598)	40,41 408		313,2 384	376	368	360	352	344	336	328	320			
37 (598-606)	416	39,40 408		33,34 392	384	376	368	360	352	344	336	328	320	
38 (606-614)	424	41,42 416		35,36 400	392	384	376	368	360	352	344	336	328	
39 (614-622)	432	43,44 424		400	392	384	376	368	360	352	344	336	328	
40 (622-630)	440	42,43 424		36,37 408	400	392	384	376	368	360	352	344	336	328
41 (630-638)	448	44,45 432		38,39 416	408	400	392	384	376	368	360	352	344	336
42 (638-646)	456	46,47 440			37,38 416	408	400	392	384	376	368	360	352	344
43 (646-654)	464	45,46 440			39,40 424	416	408	400	392	384	376	368	360	352
44 (654-662)	472	47,48 448			41,42 432	424	416	408	400	392	384	376	368	360
45 (662-670)	480	49,50 456			40,41 432	424	416	408	400	392	384	376	368	360
46 (670-678)	488	48,49 464			42,43 440	432	424	416	408	400	392	384	376	360
47 (678-686)	496	50,51 464			44,45 448	440	432	424	416	408	400	392	384	376
48 (686-694)	504	52,53 472				43,44 448	440	432	424	416	408	400	392	384
49 (694-702)	512	44,45 480				45,46 456	448	440	432	424	416	408	400	392
50 (702-710)	520	47,48 480				48,49 464	448	440	432	424	416	408	400	392
51 (710-718)	528	53,54 488				46,47 464	456	448	440	432	424	416	408	400
52 (718-726)	536	48,49 488				48,49 472	448	440	432	424	416	408	400	392
53 (726-734)	544	56,57 496				50,51 480	448	440	432	424	416	408	400	392
54 (734-742)	552	58,59 504				51,52 480	448	440	432	424	416	408	400	392
55 (742-750)	560	57,58 504				53,54 496	448	440	432	424	416	408	400	392
56 (750-758)	568	59,60 512				48,49 472	448	440	432	424	416	408	400	392
57 (758-766)	576	60 512				50,51 480	448	440	432	424	416	408	400	392
58 (766-774)	584	54,55 504				52,53 496	448	440	432	424	416	408	400	392
59 (774-782)	592	56,57 512				54,55 504	448	440	432	424	416	408	400	392
60 (782-790)	600	58,59 512				56,57 512	448	440	432	424	416	408	400	392

### Vysvetlivky:

Prázdné políčka - zakázané a nepoužiteľné prevody

25,26  
328

- čísla kanálov na vstupe meniča, ktoré rušia tento prevod (zrkadlá, produkty s 2 harm. a pod.)
- frekvencia oscilátora v MHz